

BP LIFTS

By BARKER PRODUCTS 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292





BPH2-27 SERIES LIFTS





Powered By A 27K Helical Actuator With Splined Shafts To Eliminate Arm Movement & Wear For Extreme Heavy Duty High Lift Applications 45" To 57" Mounting Heights 50" To 74" Dump Heights Over 50 Degree Dump Angle To Empty Can Quickly Dumps Deep Into Hopper to Prevent Spillage Hardened Steel Bearings At All Pivot Points

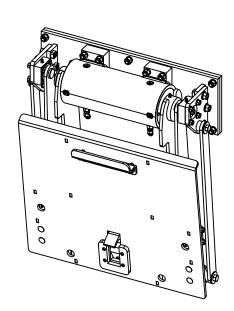

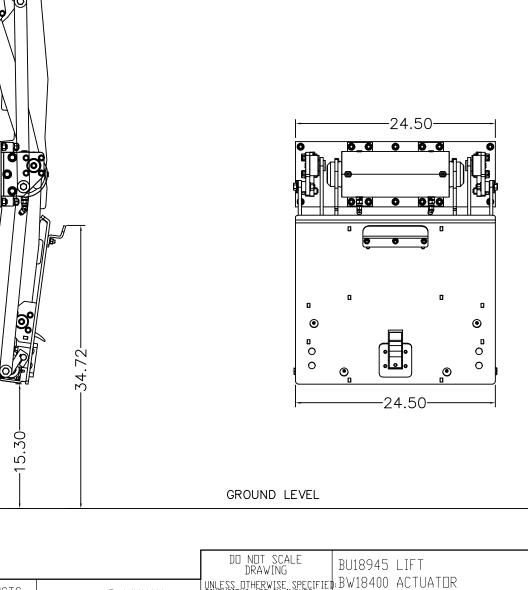

				DRAWING	BU18945 L	IFT		
	BARKER PRODUCTS	DRAWN BY:	R WYMAN	UNLESS OTHERWISE SPECIFIEI DIMENSIONS ARE IN INCHES	BW18400 A	CIUAIUR		
B	1310 MILLER ROAD GREENVILLE, SC 29607	DRAWN DI:	IN WITHIN	TOLERANCES:	DRAWING NO			REV
		DATE:	9/19/2022	FRACTIONAL ±1/32 ANGULAR: MACH ±1° BEND ±1°			00	
		MATERIAL:	NOTED	TWD PLACE DECIMAL ±0.010 THREE PLACE DECIMAL ±0.005	SCALE: 1:12	WEIGHT:	270.421 # SHEET	1 OF 1

-50.50-

-45.00-

-52.90-




BP LIFTS

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149-Fax:707-371-4886 WWW.BPLIFTS.NET




Lift Unit Installation

- 1. Truck must be empty, clean and parked on a level surface before installation is started.
- 2. Remove all bumpers and running boards that will interfere with the location of the lift units. Relocate lower mounted tail lights as needed.
- 3. Measure and mark the centerline of the truck hopper. The centerline of the unit or units should be a minimum of 17" from the hopper centerline.
- 4. Hand valves should be mounted on the side of the hopper at the most convenient height for the operator and clear of the packer controls.
- 5. The top of the unit mounting plate should be tack welded in place at the height recommended on the envelope dimension sheet of the unit. CAUTION: SEE NOTE BELOW PICTURE
- 6. All dimensions should be approved by the customer before final welding.
- 7. If the mounting plate extends more than 2" above the hopper, a brace should be added.

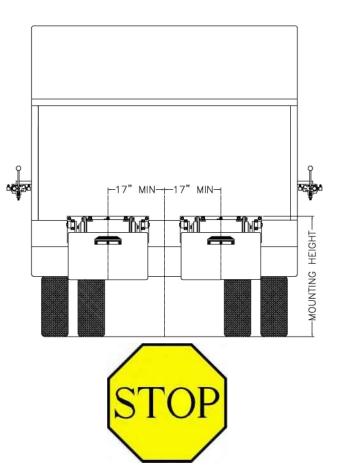



Mounting heights and locations are recommendations only. It is the responsibility of the installer to insure that the customer is satisfied with the height. Barker Products recommends that after the units are tacked in place, try the units with the can or cans the customer uses. The customer should approve your mount before final welding.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BWA18430	MAINFRAME SUB ASSY	1
2	BW18002	O-RING GREASE SEAL	2
3	BW18005	SPLINE CAP HB25	2
4	XAD081312	1/2-13 X 1 1/2 FHCS	2
5	BW18520	HOOK LINK DRIVE SPACER	2
6	XDH081300	1/2-13 FLANGED NUT	2
7	BW99108	1/2" SPHERICAL BEARING	4
8	XEA082412SS	FLAT WASHER 1/2 X 1 1/2 X 1/8	4
9	XAA081318	1/2-13 X 2 1/4 HHCS	2
10	XAA081314	1/2-13 X 1 3/4 HHCS	2
11	XAE061606	3/8-16 X 3/4 FLANGED HHCS	6
12	BW18570	RIGHT LIFT ARM	1
13	BW18560	LEFT LIFT ARM	1
14	BWA18540	LIFT PLATE SUB ASSY	1
15	XEA062412SS	FLAT WASHER 3/8 X 1 1/2 X 1/8	6
16	BW18640	GUIDE ARM	2
17	BWA07490	HOOK SUB ASSY	1
18	BW18680	HOOK LINK	2
19	XDA081300	1/2-13 HEX NUT	2

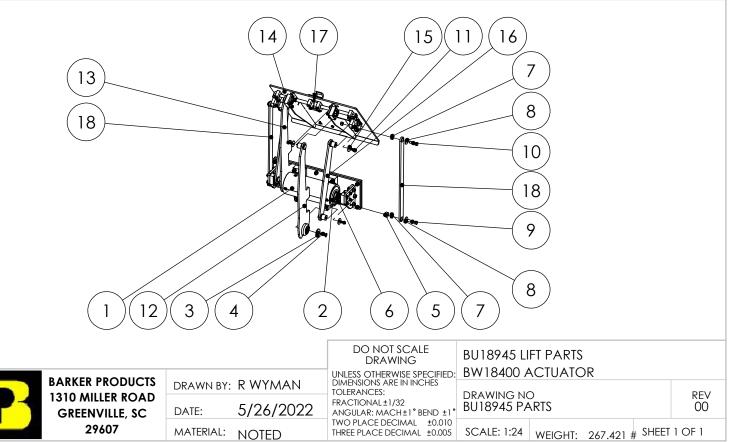

1		
PART NUMBER	DESCRIPTION	QTY.
BW18506	MAINFRAME	1
XEB081000	1/2 LOCK WASHER	14
XDA082000	1/2-20 HEX NUT	14
BW07030	MOUNT PLATE H	1
BW07140	PLATE STUD	6
BW18510	BEARING MOUNT	2
XAE081312	1/2-13 X 1 1/2 FLANGED HHCS	6
BW18530	BEARING BODY	2
BW21065	PIVOT BEARING SPACER	2
BW99320	SPHERICAL BEARING 1 1/4	2
XAE061608	3/8-16 X 1 FLANGED HHCS	8
BV00025	116 X 1/8 NPT ORIFICE PLUG	1
BV00064	6T X 6S ORIFICE FITTING	1
BR04842	6502-06-06 MJ-FJS 45 DEG	2
BR03830	6400-06-06 M TUBE TO O-RING	1
BW07105	ACTUATOR MOUNT STUD	8
BW18400	ACTUATOR	1
BW18002	O-RING GREASE SEAL	2
	BW18506 XEB081000 XDA082000 BW07030 BW07140 BW18510 XAE081312 BW18530 BW21065 BW99320 XAE061608 BV00025 BV00064 BR03830 BW07105 BW18400	BW18506 MAINFRAME XEB081000 1/2 LOCK WASHER XDA082000 1/2-20 HEX NUT BW07030 MOUNT PLATE H BW07140 PLATE STUD BW18510 BEARING MOUNT XAE081312 1/2-13 X 1 1/2 FLANGED HHCS BW18530 BEARING BODY BW21065 PIVOT BEARING SPACER BW99320 SPHERICAL BEARING 1 1/4 XAE061608 3/8-16 X 1 FLANGED HHCS BV00025 116 X 1/8 NPT ORIFICE PLUG BV00064 6502-06-06 MJ-FJS 45 DEG BR03830 6400-06-06 M TUBE TO O-RING BW07105 ACTUATOR MOUNT STUD BW18400 ACTUATOR

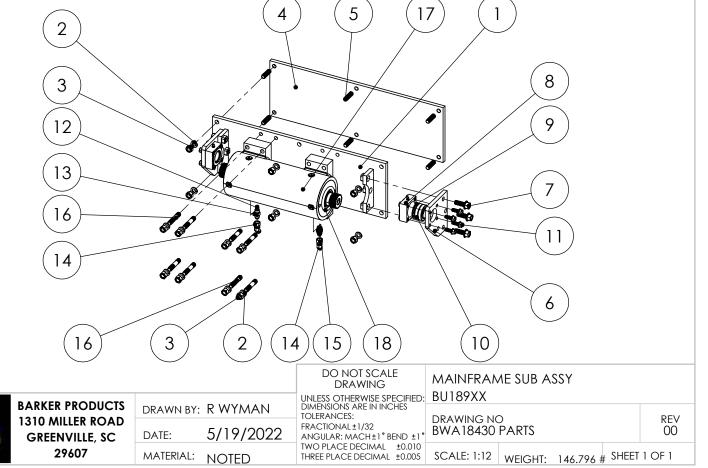

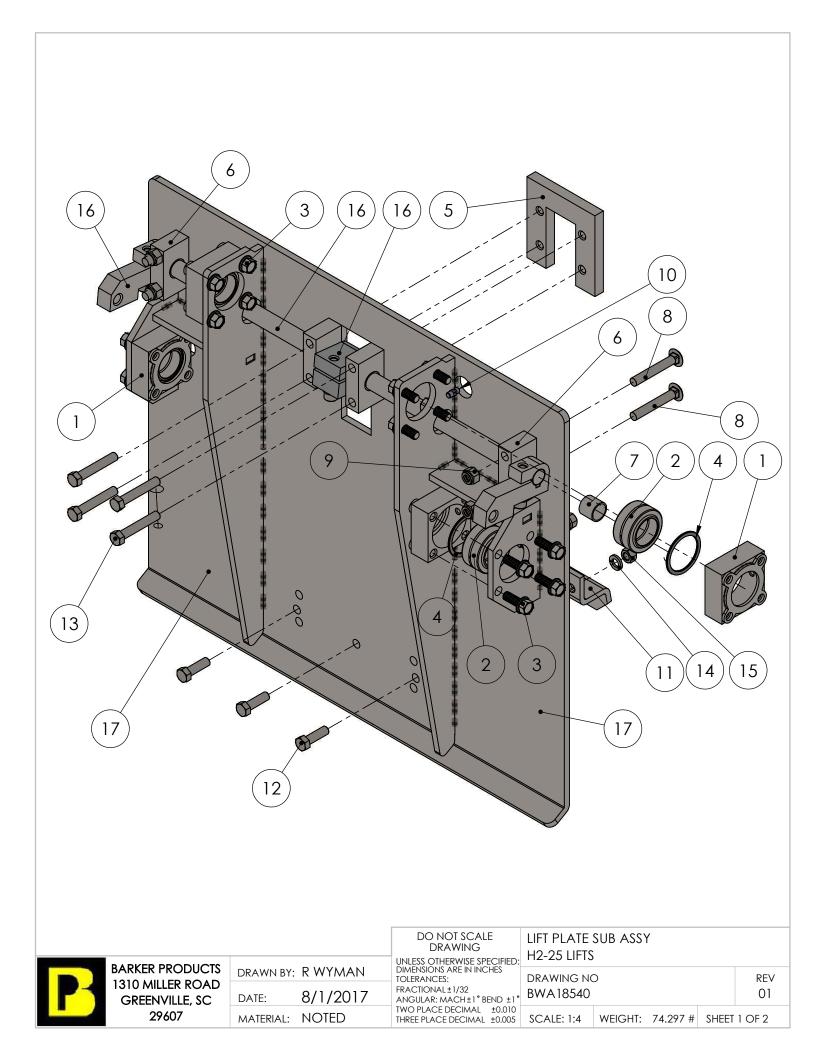

	1		
ITEM NO. PART NUMBER		DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18530	BEARING BODY	4
2	BW99320	SPHERICAL BEARING 1 1/4	4
3	XAE061608	3/8-16 X 1 FLANGED HHCS	16
4	BW21065	PIVOT BEARING SPACER	4
5	BZ03451	SUPPORT PLATE	1
6	BW17130	HOOK BEARING MOUNT	4
7	BW03195	12-DU-12 BEARING	4
8	XAH061620	3/8-16 X 2 1/2 CARRIAGE BOLT	4
9	XDC061600	3/8-16 NYLOK NUT	4
10	BW01110	GREASE FITTING - 1/4-28 SHORT	4
11	BW00800	SADDLE	1
12	XAA061610	3/8-16 X 1 1/4 HHCS	3
13	XAA061618	3/8-16 X 2 1/4 HHCS	4
14	XEB061000	3/8 LOCKWASHER	3
15	XDA061600	3/8-16 HEX NUT	3
16	BWA07490	HOOK SUB ASSY	1
17	BW18540	LIFT PLATE	1

				DO NOT SCALE DRAWING	LIFT PLATE SUB ASSY H2-25 LIFTS				
P	BARKER PRODUCTS 1310 MILLER ROAD GREENVILLE, SC 29607	DRAWN BY:	R WYMAN	UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES:	DRAWING NO BWA18540			REV	
		DATE:	8/1/2017	FRACTIONAL±1/32 ANGULAR: MACH±1° BEND ±1					01
		MATERIAL:	NOTED	TWO PLACE DECIMAL ±0.010 THREE PLACE DECIMAL ±0.005	SCALE: 1:6	WEIGHT:	74.297 #	SHEET	2 OF 2

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18550	hook shaft	1
2	BW07560	WOODRUFF KEY #806	3
3	BW07490	НООК	1
4	BW06780	HOOK DRIVE	2
5	XEB061000	3/8 LOCKWASHER	3
6	XAB061612	3/8-16 X 1 1/2 SHCS	3

	29607	MATERIAL:	NOTED	TWO PLACE DECIMAL ±0.010 THREE PLACE DECIMAL ±0.005	SCALE: 1:4	WEIGHT:	6.177 #	SHEET	1 OF 1
P	BARKER PRODUCTS 1310 MILLER ROAD GREENVILLE, SC	DATE:	8/1/2017	FRACTIONAL±1/32 ANGULAR: MACH±1° BEND ±1	BWA07490			00	
		drawn by: R WYMAN		DIMENSIONS ARE IN INCHES TOLERANCES:	DRAWING NO			REV	
				UNLESS OTHERWISE SPECIFIED:	H2-25				
				DO NOT SCALE DRAWING	HOOK SUB	ASSY			



BP LIFTS

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292



BPH27-186XX SERIES LIFT UNIT WARRANTY

Barker Products warranties each new dump unit to be free of defects in material and workmanship under normal use and service for a period of 1 year or 2000 hours of operation, whichever comes first, from the date of delivery.

This warranty excludes any obligations by BARKER PRODUCTS for the cost of down time. BARKER PRODUCTS will not warranty any dump unit which has been subject to misuse, neglect, alteration, or damaged by an accident.

On any work not performed by BARKER PRODUCTS or it's representitive, the customer will be responsible for freight charges on all parts shipped under warranty. Parts will be invoiced at time of shipment. Defective parts must be returned to BARKER PRODUCTS within 30 days. If the part is determined to be defective the customer will be credited for the original invoice.

Customer warranty labor charges must be approved by BARKER PRODUCTS in advance. If not contacted for approval, BARKER PRODUCTS will not be liable for the warranty labor charge.

Limit hydraulic input pressure to 2000PSI