

### **BP Lifts**

By Barker Products 1310 Miller Road, Greenville, SC 29607




# 

Part # BU18341





- Dependable Smooth Acting 25K Helical Rotary Actuator
- Splined Shafts To Eliminate Arm Movement And Wear
- 45 Degree Dump Angle
- No Grease Points
- EZ Bolt On Kit Standard
- Meets ANSI Z245 Type B Specs Lifts All Standard American 2 Bar Carts
- Liftplate Arc Motion Makes Cart Attachment Fast And Easy On Unlevel Highway Conditions
- Double Wide Mounting Plate Available. Increases Hopper Height To Decrease Packing Cycles
- 38 to 44 Inch Mounting Height
- 18 1/2 to 24 1/2 Inch Ground Clearance
- Use on Rear Loaders

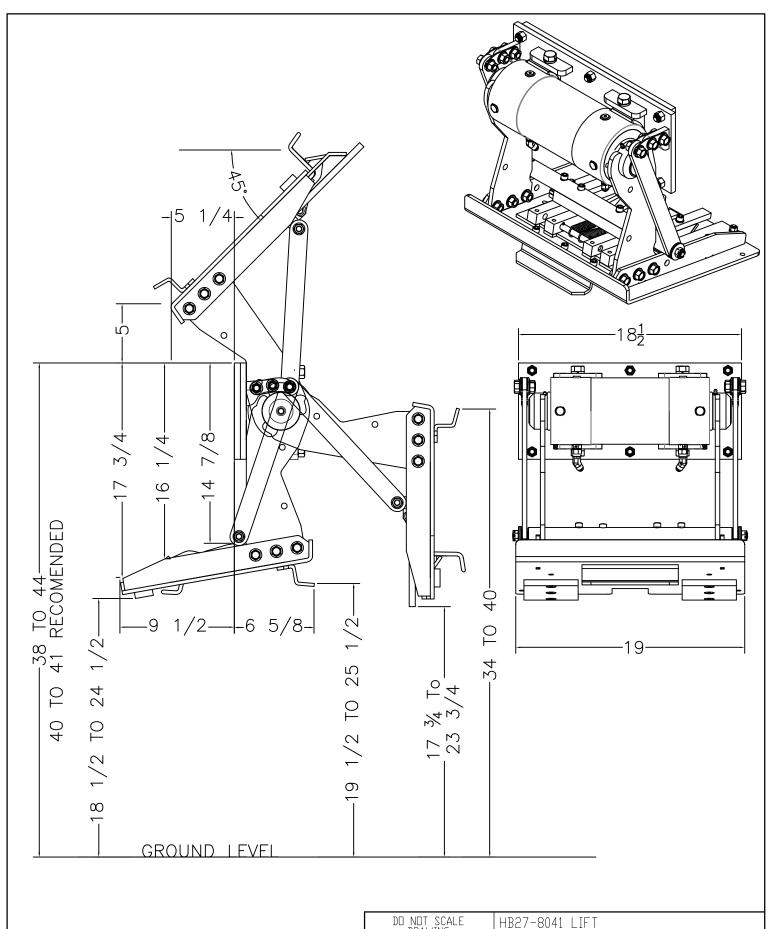



BARKER PRODUCTS 1310 MILLER ROAD GREENVILLE, SC 29607

DRAWN BY: R WYMAN 10/11/2018 DATE: NOTED MATERIAL:

DO NOT SCALE DRAWING UNLESS OTHERWISE SPECIFIE DIMENSIONS ARE IN INCHES

TOLERANCES:
FRACTIONAL ±1/32
ANGULAR: MACH ±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

T30-27 ACTUATOR DRAWING NO REV BU18341 ENVELOPE 00 WEIGHT: 138,803 # SHEET 1 OF 1 SCALE: 1:8




### **BP LIFTS**

By Barker Products
1310 Miller Road, Greenville, SC 29607
Phone:800-349-3149—Fax:707-371-4886
WWW.BPLIFTS.NET



## Lift Unit Installation

- 1. Truck must be empty, clean and parked on a level surface before installation is started.
- 2. Remove all bumpers and running boards that will interfere with the location of the lift units. Relocate lower mounted tail lights as needed.
- 3. Measure and mark the centerline of the truck hopper. The centerline of the unit or units should be a minimum of 17" from the hopper centerline.
- 4. Hand valves should be mounted on the side of the hopper at the most convenient height for the operator and clear of the packer controls.
- 5. The top of the unit mounting plate should be tack welded in place at the height recommended on the envelope dimension sheet of the unit. CAUTION: SEE NOTE BELOW PICTURE
- 6. All dimensions should be approved by the customer before final welding.
- 7. If the mounting plate extends more than 2" above the hopper, a brace should be added.

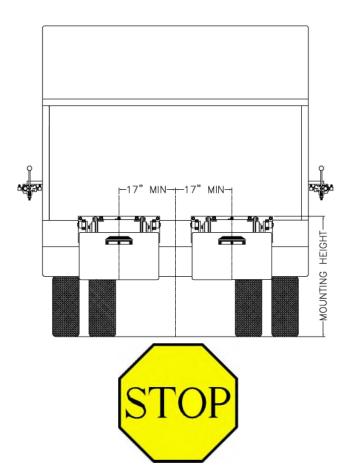

Mounting heights and locations are recommendations only. It is the responsibility of the installer to insure that the customer is satisfied with the height. Barker Products recommends that after the units are tacked in place, try the units with the can or cans the customer uses. The customer should approve your mount before final welding.



### **BP LIFTS**

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292



### BPHB27-183XX SERIES LIFT UNIT WARRANTY

Barker Products warranties each new dump unit to be free of defects in material and workmanship under normal use and service for a period of 1 year or 2000 hours of operation, whichever comes first, from the date of delivery.


This warranty excludes any obligations by BARKER PRODUCTS for the cost of down time. BARKER PRODUCTS will not warranty any dump unit which has been subject to misuse, neglect, alteration, or damaged by an accident.

On any work not performed by BARKER PRODUCTS or it's representitive, the customer will be responsible for freight charges on all parts shipped under warranty. Parts will be invoiced at time of shipment. Defective parts must be returned to BARKER PRODUCTS within 30 days. If the part is determined to be defective the customer will be credited for the original invoice.

Customer warranty labor charges must be approved by BARKER PRODUCTS in advance. If not contacted for approval, BARKER PRODUCTS will not be liable for the warranty labor charge.

Limit hydraulic input pressure to 1700 PSI

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BWA18015	MAINFRAME SUB ASSY	1
2	BW18030	LEFT LIFT ARM	1
3	BW18040	RIGHT LIFT ARM	1
4	BW18005	SPLINE CAP HB25	2
5	XAD081312	1/2-13 X 1 1/2 SHCS	2
6	BW18055	SLIDE LINK PIVOT CAP	4
7	BW18065	SLIDE LINK	2
8	BW99108	1/2" SPHERICAL BEARING	4
9	XDH081300	1/2-13 FLANGED NUT	12
10	XAE081310	1/2-13 X 1 1/4 FLANGED HHCS	12
11	BWA18090	LIFT PLATE SUB ASSY	1
12	BW19000	SLIDE SUB ASSY	1
13	BW02210	1/2" BELLEVILLE SPRING WASHER	4
14	XDE081300	1/2-13 SLOTTED NUT	2
15	BW02125	5/32 X 3/4 SPRING PIN	2
16	BW18002	O-RING GREASE SEAL	2

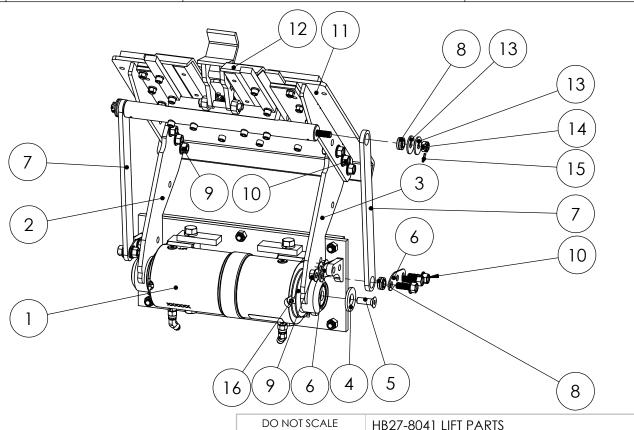

BARKER PRODUCTS 1310 MILLER ROAD GREENVILLE, SC 29607

DRAWN BY: R WYMAN

DATE: 12/12/2017
MATERIAL: NOTED

DRAWING

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1 BEND ±1 TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005


HB27-8041 LIFT PARTS T30-27 ACTUATOR

SCALE: 1:8

DRAWING NO REV BU18341 PARTS 00

WEIGHT: 185.753 # SHEET 1 OF 1

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18015	MAINFRAME	1
2	BW18300	ACTUATOR	1
3	XEB101000	5/8 LOCKWASHER	5
4	BV00025	116 X 1/8 NPT ORIFICE PLUG	1
5	BV00064	6T X 6S ORIFICE FITTING	1
6	BR04842	6502-06-06 MJ-FJS 45 DEG	2
7	BR03830	6400-06-06 M TUBE 0-RING	1
8	BW17525	MOUNT PLATE - N	1
9	BW07140	PLATE STUD	6
10	XDC082000	1/2-20 NYLOK NUT	6
11	XAB101110	5/8-11 X 1 1/4 SHCS	4

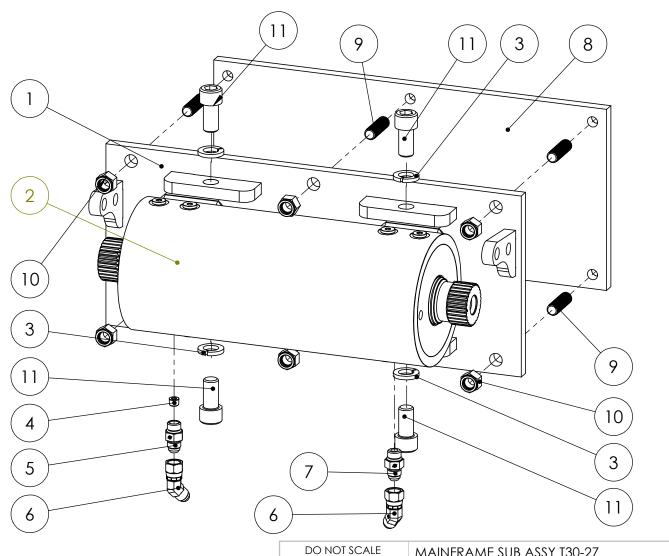



DRAWN BY: R WYMAN

DATE: 3/18/2020 MATERIAL: NOTED DRAWING

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1 BEND ±1 TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005


MAINFRAME SUB ASSY T30-27 HB2580 & 55

SCALE: 1:4

DRAWING NO REV BWA18015 PARTS 00

WEIGHT: 122.575 # SHEET 1 OF 1

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BW18014	MAINFRAME	1
2	BW18013	27K ACTUATOR MT BRKT	4
3	BW07105	actuator mount stud	8
4	XEB081000	1/2 LOCK WASHER	14
5	XDA082000	1/2-20 HEX NUT	14
6	XEC1014203	5/8 HIGH COLLAR LOCK WASHER	4
7	XAB101110	5/8-11 X 1 1/4 SHCS	4
8	BW18300	27K HELICAL ACTUATOR	1
9	BW17525	MOUNT PLATE - N	1
10	BW07140	PLATE STUD	6
11	BV00025	116 X 1/8 NPT ORIFICE PLUG	2
12	BV00064	6T X 6S ORIFICE FITTING	1
13	BR04842	6502-06-06 MJ-FJS 45 DEG	2
14	BR03830	6400-06-06 M TUBE TO O-RING	1

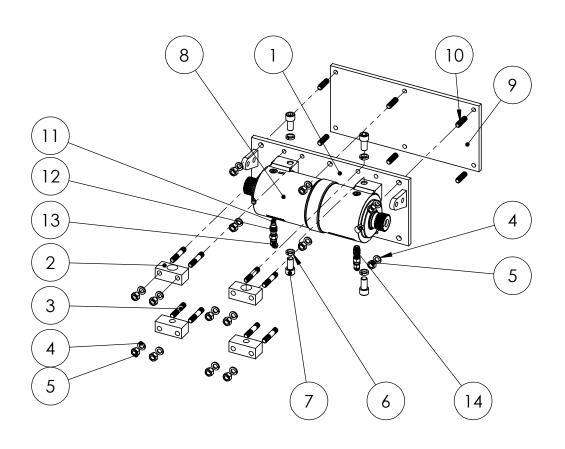



DRAWN BY: R WYMAN

DATE: 4/12/2022

MATERIAL: NOTED

#### DO NOT SCALE DRAWING


UNLESS OTHERWISE SPECIFIED: BU18XXX
DIMENSIONS ARE IN INCHES
TOLERANCES:
TOLER

MAINFRAME SUB ASSY BU18XXX

DRAWING NO BWA18014 REV 00

SCALE: 1:10 | WEIGHT: 114.581 # SHEET 1 OF 1

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18090	LIFT PLATE	1
2	BW00800	SADDLE	1
3	XAB061610	3/8-16 X 1 1/4 SHCS	3
4	XEB061000	3/8 LOCKWASHER	9
5	XDA061600	3/8-16 HEX NUT	9
6	BW10675	CAN SUPPORT	2
7	XAD061616	3/8-16 X 2 FSHCS	6
8	BW19110	SLIDE SPACER	2
9	BW19100	SLIDE CAP	2

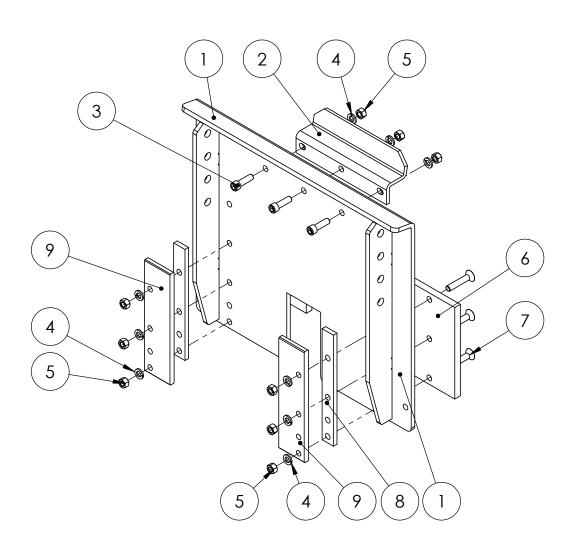



DRAWN BY: R WYMAN

DATE: 7/12/2017

MATERIAL: NOTED


DO NOT SCALE
DRAWING
UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

LIFT PLATE SUB ASSY HB25 DRAWING NO

BWA18090 00 00 5 SCALE: 1:6 WEIGHT: 41.513 # SHEET 1 OF 1

REV

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODE VIEW/QTY.
1	BW10230	SLIDE PLATE	1
2	BW10240	SLIDE SUPPORT	4
3	XAD061606	3/8-16 X 3/4 FHSCS	12
4	BW10110	SPRING SHAFT	1
5	BW10680	НООК	1
6	BW10100	hook shaft	1
7	BW02125	5/32 X 3/4 SPRING PIN	4
8	BW10120	hook spring	2
9	BW10690	SLIDE EXTENSION	2
10	XEB061000	3/8 LOCKWASHER	4
11	XAB061608	3/8-16 X 1 SHCS	4
12	XAB061620	3/8-16 X 2 1/2 SHCS	4
13	BW18080	HOOK MOUNT	1
14	BW18075	SLIDE DRIVE	1
15	XEC0606080	3/8 HC LOCKWASHER	4

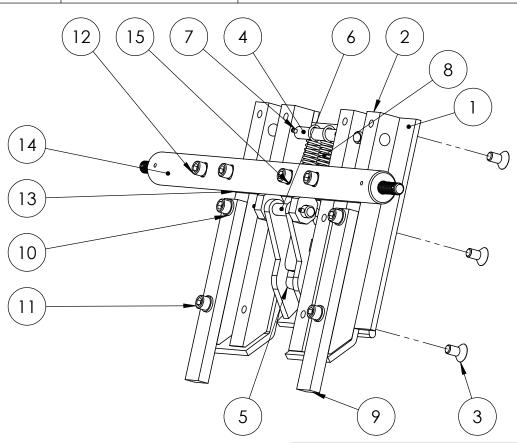

BARKER PRODUCTS
1310 MILLER ROAD
GREENVILLE, SC
29607

DRAWN BY: R WYMAN

DATE: 7/12/2017

MATERIAL: NOTED

DO NOT SCALE
DRAWING
UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

SLIDE PARTS 25K UNITS

SCALE: 1:4

DRAWING NO REV BW19000 00

WEIGHT: 30.667 # SHEET 1 OF 1