

### **BP LIFTS**

By BARKER PRODUCTS 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292



# **BPH2-27 SERIES LIFTS**






Powered By A 27K Helical Actuator With

Splined Shafts To Eliminate Arm Movement & Wear For

Extreme Heavy Duty High Lift Applications
45" To 57" Mounting Heights
50" To 74" Dump Heights
Over 50 Degree Dump Apple To Empty Can Qui

Over 50 Degree Dump Angle To Empty Can Quickly Dumps Deep Into Hopper to Prevent Spillage Hardened Steel Bearings At All Pivot Points

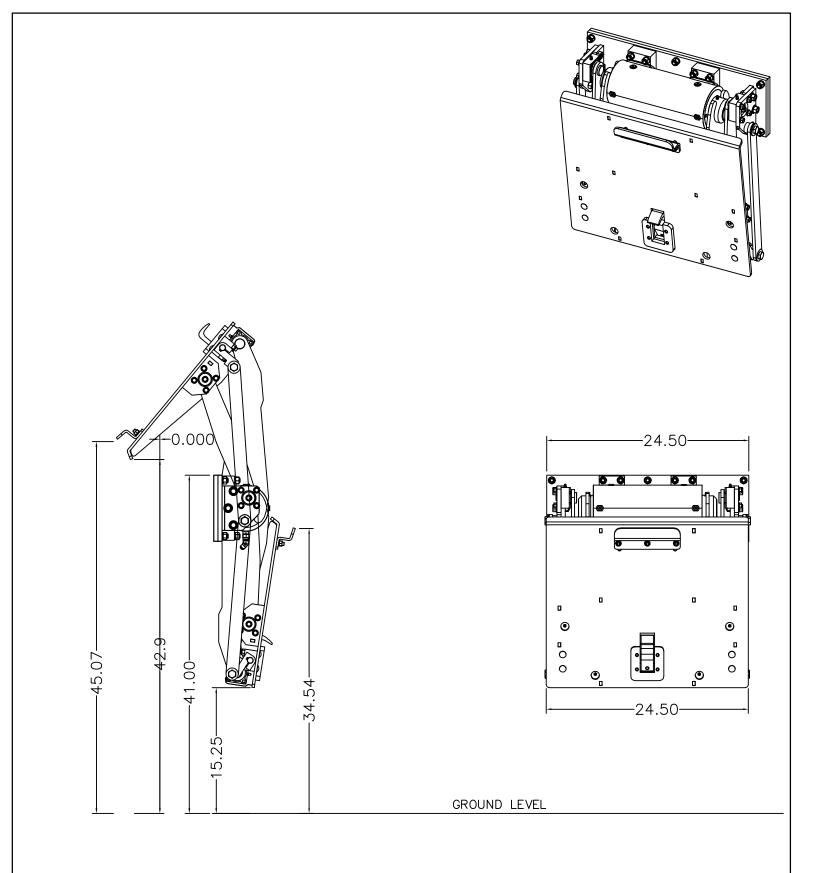



DRAWN BY: R WYMAN

 DATE:
 9/19/2022

 MATERIAL:
 NOTED

DO NOT SCALE
DRAWING

UNLESS DTHERWISE SPECIFIED
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL ±1/32
ANGULAR: MACH ±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

H2-2741 LIFT BW18400 ACTUATOR

DRAWING ND BU18941 REV 00

SCALE: 1:12 WEIGHT: 258.639 # SHEET 1 DF 1




### **BP LIFTS**

By Barker Products
1310 Miller Road, Greenville, SC 29607
Phone:800-349-3149—Fax:707-371-4886
WWW.BPLIFTS.NET




# Lift Unit Installation

- 1. Truck must be empty, clean and parked on a level surface before installation is started.
- 2. Remove all bumpers and running boards that will interfere with the location of the lift units. Relocate lower mounted tail lights as needed.
- 3. Measure and mark the centerline of the truck hopper. The centerline of the unit or units should be a minimum of 17" from the hopper centerline.
- 4. Hand valves should be mounted on the side of the hopper at the most convenient height for the operator and clear of the packer controls.
- 5. The top of the unit mounting plate should be tack welded in place at the height recommended on the envelope dimension sheet of the unit. CAUTION: SEE NOTE BELOW PICTURE
- 6. All dimensions should be approved by the customer before final welding.
- 7. If the mounting plate extends more than 2" above the hopper, a brace should be added.

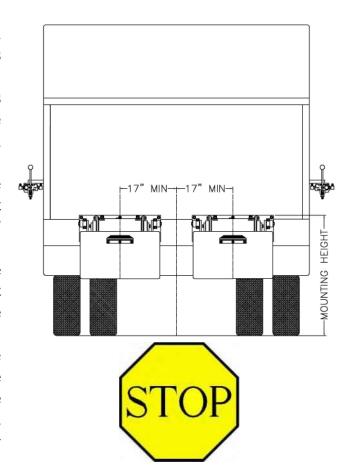

Mounting heights and locations are recommendations only. It is the responsibility of the installer to insure that the customer is satisfied with the height. Barker Products recommends that after the units are tacked in place, try the units with the can or cans the customer uses. The customer should approve your mount before final welding.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BWA18420	MAINFRAME SUB ASSY	1
2	BW18002	O-RING GREASE SEAL	2
3	XAD081312	1/2-13 X 1 1/2 FHCS	2
4	XEA062412SS	FLAT WASHER 3/8 X 1 1/2 X 1/8	4
5	XEA082412SS	FLAT WASHER 1/2 X 1 1/2 X 1/8	6
6	XAE061606	3/8-16 X 3/4 FLANGED HHC\$	6
7	BWA18540	LIFT PLATE SUB ASSY	1
8	BWA07490	HOOK SUB ASSY	1
9	BW18520	hook link drive spacer	2
10	BW99108	1/2" SPHERICAL BEARING	4
11	XAA081316	1/2-13 X 2 HHCS	4
12	XDA081300	1/2-13 HEX NUT	4
13	BW18551	LEFT LIFT ARM	1
14	BW18005	SPLINE CAP HB25	2
15	BW18552	RIGHT LIFT ARM	1
16	BW18631	GUIDE ARM	2
17	BW18671	HOOK LINK	2

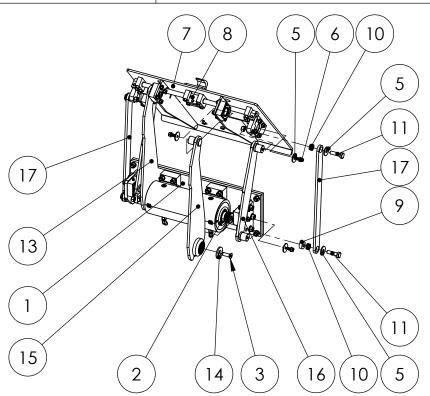

DRAWN BY: R WYMAN

5/25/2022 DATE:

MATERIAL: NOTED

DO NOT SCALE DRAWING

UNLESS OTHERWISE SPECIFIED: BW18400 ACTUATOR DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL±1/32 ANGULAR: MACH±1° BEND ±1°

TWO PLACE DECIMAL ±0.010 THREE PLACE DECIMAL ±0.005

H2-2741 LIFT PARTS


DRAWING NO BU18941

SCALE: 1:16 WEIGHT: 260.639 # SHEET 1 OF 1

REV

00

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BW18506	MAINFRAME	1
2	XEB081000	1/2 LOCK WASHER	14
3	XDA082000	1/2-20 HEX NUT	14
4	BW07030	MOUNT PLATE H	1
5	BW07140	PLATE STUD	6
6	BW18503	BEARING MOUNT	2
7	XAE081312	1/2-13 X 1 1/2 FLANGED HHC\$	6
8	BW18530	BEARING BODY	
9	BW21065	PIVOT BEARING SPACER	2
10	BW99320	SPHERICAL BEARING 1 1/4	2
11	XAE061608	3/8-16 X 1 FLANGED HHCS	8
12	BV00025	116 X 1/8 NPT ORIFICE PLUG	1
13	BV00064	6T X 6S ORIFICE FITTING	1
14	BR04842	6502-06-06 MJ-FJS 45 DEG	2
15	BR03830	6400-06-06 M TUBE TO O-RING	1
16	BW07105	ACTUATOR MOUNT STUD	8
17	BW18400	ACTUATOR	1
18	BW18002	O-RING GREASE SEAL	2

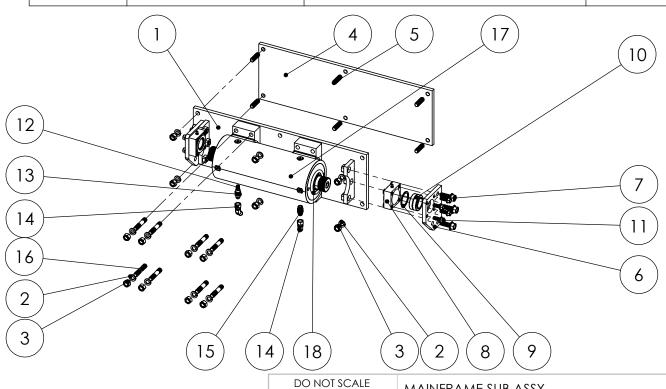

DRAWN BY: R WYMAN

DATE: 5/19/2022

NOTED

MATERIAL:

DRAWING

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
TOLERANCES:

FRACTIONAL±1/32
ANGULAR: MACH±1° BEND±1°

TWO PLACE DECIMAL ±0.010


THREE PLACE DECIMAL ±0.005

SCALE: 1:12

MAINFRAME SUB ASSY BU189XX

DRAWING NO BWA 18420 PARTS REV 00

SCALE: 1:12 WEIGHT: 145.977 # SHEET 1 OF 1

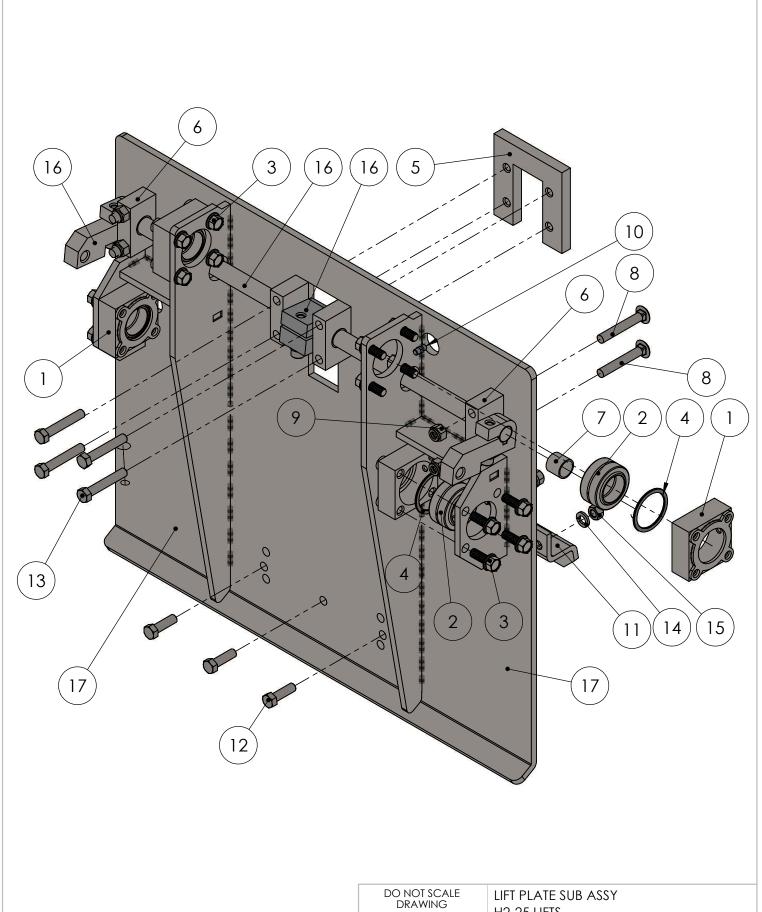

DRAWN BY: R WYMAN

DATE: 8/1/2017 MATERIAL: NOTED DRAWING

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

H2-25 LIFTS

DRAWING NO REV BWA18540 01

SCALE: 1:4 WEIGHT: 74.297 # SHEET 1 OF 2

ITEM NO.	PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18530	BEARING BODY	4
2	BW99320	SPHERICAL BEARING 1 1/4	4
3	XAE061608	3/8-16 X 1 FLANGED HHCS	16
4	BW21065	PIVOT BEARING SPACER	4
5	BZ03451	SUPPORT PLATE	1
6	BW17130	HOOK BEARING MOUNT	4
7	BW03195	12-DU-12 BEARING	4
8	XAH061620	3/8-16 X 2 1/2 CARRIAGE BOLT	4
9	XDC061600	3/8-16 NYLOK NUT	4
10	BW01110	GREASE FITTING - 1/4-28 SHORT	4
11	BW00800	SADDLE	1
12	XAA061610	3/8-16 X 1 1/4 HHCS	3
13	XAA061618	3/8-16 X 2 1/4 HHCS	4
14	XEB061000	3/8 LOCKWASHER	3
15	XDA061600	3/8-16 HEX NUT	3
16	BWA07490	HOOK SUB ASSY	1
17	BW18540	LIFT PLATE	1

BARKER PRODUCTS 1310 MILLER ROAD
GREENVILLE, SC
 29607

DRAWN BY: R WYMAN

DATE: 8/1/2017

MATERIAL: NOTED

DO NOT SCALE DRAWING

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1°BEND±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

SCALE: 1:6


LIFT PLATE SUB ASSY
H2-25 LIFTS
DRAWING NO
BWA 18540

SCALE: 1:6 WEIGHT: 74.297 # SHEET 2 OF 2

**REV** 

01

ITEM N	O. PART NUMBER	DESCRIPTION	EXPLODED PARTS/QTY.
1	BW18550	hook shaft	1
2	BW07560	WOODRUFF KEY #806	3
3	BW07490	HOOK	1
4	BW06780	HOOK DRIVE	2
5	XEB061000	3/8 LOCKWASHER	3
6	XAB061612	3/8-16 X 1 1/2 SHCS	3

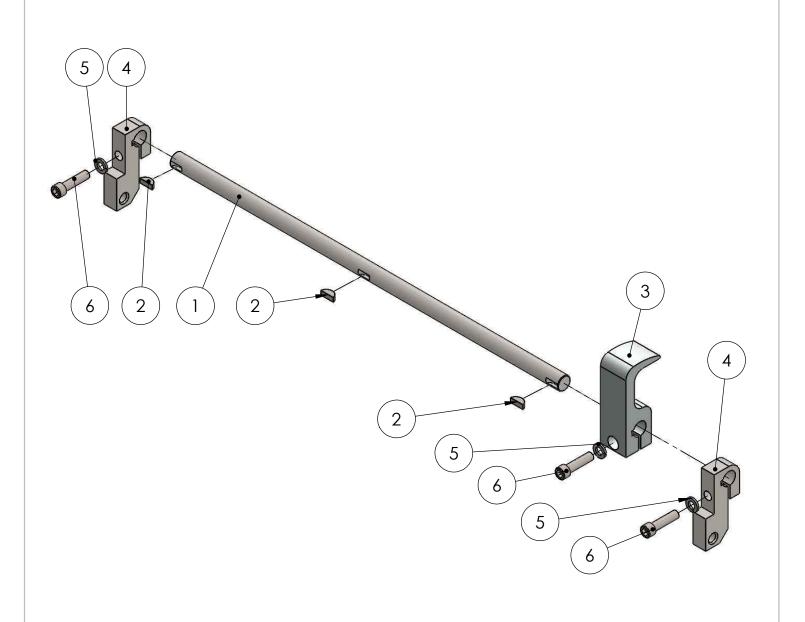

BARKER PRODUCTS 1310 MILLER ROAD GREENVILLE, SC 29607
--

DRAWN BY: R WYMAN

DATE: 8/1/2017
MATERIAL: NOTED

DO NOT SCALE
DRAWING
UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
FRACTIONAL±1/32
ANGULAR: MACH±1° BEND ±1°
TWO PLACE DECIMAL ±0.010
THREE PLACE DECIMAL ±0.005

HOOK SUB ASSY H2-25 DRAWING NO

SCALE: 1:4

DRAWING NO REV BWA07490 00

SHEET 1 OF 1

WEIGHT: 6.177 #



## **BP LIFTS**

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292



### BPH27-186XX SERIES LIFT UNIT WARRANTY

Barker Products warranties each new dump unit to be free of defects in material and workmanship under normal use and service for a period of 1 year or 2000 hours of operation, whichever comes first, from the date of delivery.

This warranty excludes any obligations by BARKER PRODUCTS for the cost of down time. BARKER PRODUCTS will not warranty any dump unit which has been subject to misuse, neglect, alteration, or damaged by an accident.

On any work not performed by BARKER PRODUCTS or it's representitive, the customer will be responsible for freight charges on all parts shipped under warranty. Parts will be invoiced at time of shipment. Defective parts must be returned to BARKER PRODUCTS within 30 days. If the part is determined to be defective the customer will be credited for the original invoice.

Customer warranty labor charges must be approved by BARKER PRODUCTS in advance. If not contacted for approval, BARKER PRODUCTS will not be liable for the warranty labor charge.

Limit hydraulic input pressure to 2000PSI