






BP Lifts By Barker Products 1310 Miller Road, Greenville, SC 29607

Part # BU19645





- Dependable Smooth Acting 27K Helical Rotary Actuator
- Splined Shafts To Eliminate Arm Movement And Wear
- 50 Degree Dump Angle
- No Grease Points
- EZ Bolt On Kit Standard
- Meets ANSI Z245 Type B Specs
- Lifts All Standard American 2 Bar Carts
- Lift Plate Arc Motion Makes Cart Attachment Fast And Easy On Unlevel Highway Conditions
- Double Wide Mounting Plate Available. Increases Hopper Height To Decrease Packing Cycles
- 41 to 45 Inch Mounting Height
- 23 1/8 to 25 1/8 Inch Ground Clearance
- Use on Rear Loaders with or without kick bars
- Limit Hydraulic Input Pressure To 1700 PSI

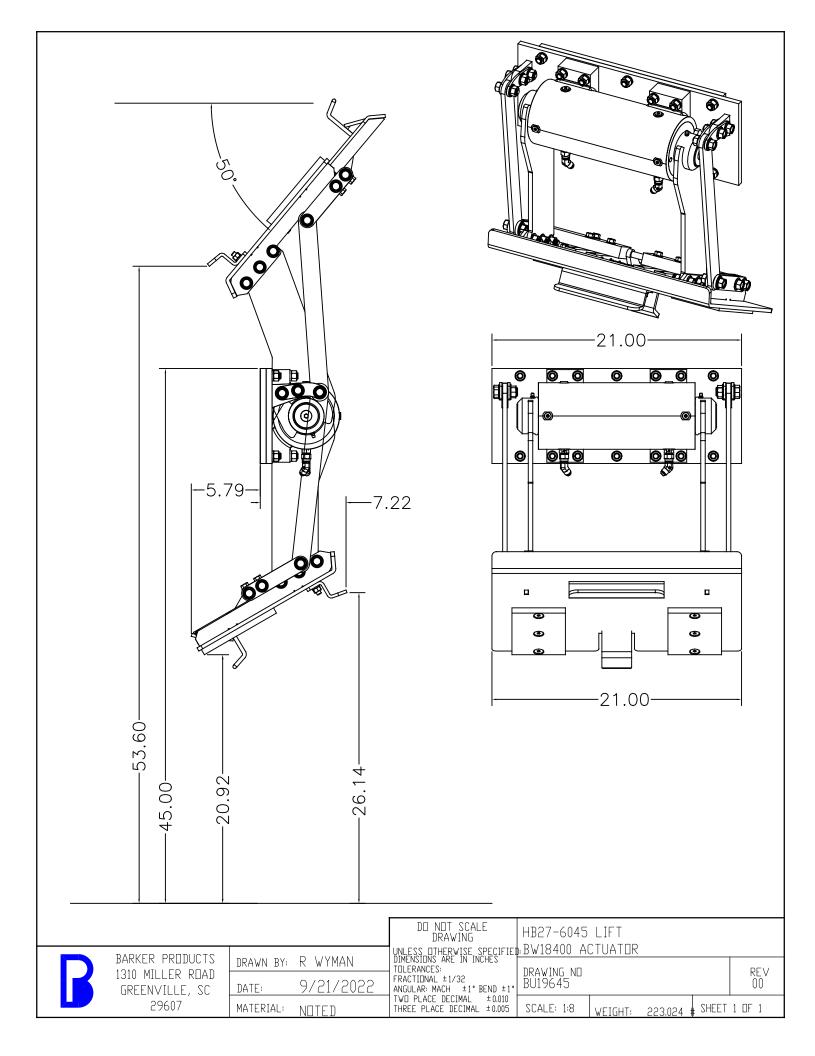




BP LIFTS

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149-Fax:707-371-4886 WWW.BPLIFTS.NET



Lift Unit Installation

- 1. Truck must be empty, clean and parked on a level surface before installation is started.
- 2. Remove all bumpers and running boards that will interfere with the location of the lift units. Relocate lower mounted tail lights as needed.
- 3. Measure and mark the centerline of the truck hopper. The centerline of the unit or units should be a minimum of 17" from the hopper centerline.
- 4. Hand valves should be mounted on the side of the hopper at the most convenient height for the operator and clear of the packer controls.
- 5. The top of the unit mounting plate should be tack welded in place at the height recommended on the envelope dimension sheet of the unit. CAUTION: SEE NOTE BELOW PICTURE
- 6. All dimensions should be approved by the customer before final welding.
- 7. If the mounting plate extends more than 2" above the hopper, a brace should be added.

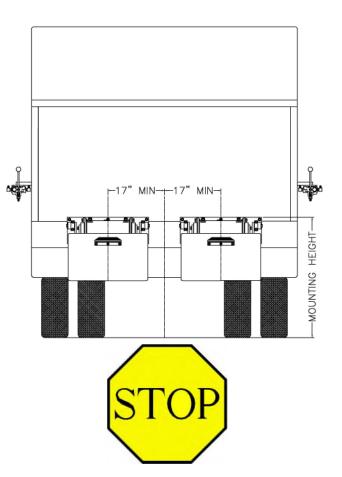

Mounting heights and locations are recommendations only. It is the responsibility of the installer to insure that the customer is satisfied with the height. Barker Products recommends that after the units are tacked in place, try the units with the can or cans the customer uses. The customer should approve your mount before final welding.



BP LIFTS

By Barker Products 1310 Miller Road, Greenville, SC 29607 Phone:800-349-3149—Fax:864-297-1292



BPHB27-193XX SERIES LIFT UNIT WARRANTY

Barker Products warranties each new dump unit to be free of defects in material and workmanship under normal use and service for a period of 1 year or 2000 hours of operation, whichever comes first, from the date of delivery.


This warranty excludes any obligations by BARKER PRODUCTS for the cost of down time. BARKER PRODUCTS will not warranty any dump unit which has been subject to misuse, neglect, alteration, or damaged by an accident.

On any work not performed by BARKER PRODUCTS or it's representitive, the customer will be responsible for freight charges on all parts shipped under warranty. Parts will be invoiced at time of shipment. Defective parts must be returned to BARKER PRODUCTS within 30 days. If the part is determined to be defective the customer will be credited for the original invoice.


Customer warranty labor charges must be approved by BARKER PRODUCTS in advance. If not contacted for approval, BARKER PRODUCTS will not be liable for the warranty labor charge.

Limit hydraulic input pressure to 1700 PSI

	· · · · · · · · · · · · · · · · · · ·		
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BWA19014	MAINFRAME SUB ASSY	1
2	BW18005	SPLINE CAP HB25	2
3	BWA19290	LIFT PLATE SUB ASSY	1
4	BWA19280	SLIDE SUB ASSY	1
5	BW99108	1/2" SPHERICAL BEARING	2
6	XAE081312	1/2-13 X 1 1/2 FLANGED HHCS	18
7	XDH081300	1/2-13 FLANGED NUT	14
8	XAD081312	1/2-13 X 1 1/2 FHSCS	2
9	BW19345	LEFT LIFT ARM	1
10	BW19324	SLIDE LINK	2
11	BW19346	RIGHT LIFT ARM	1

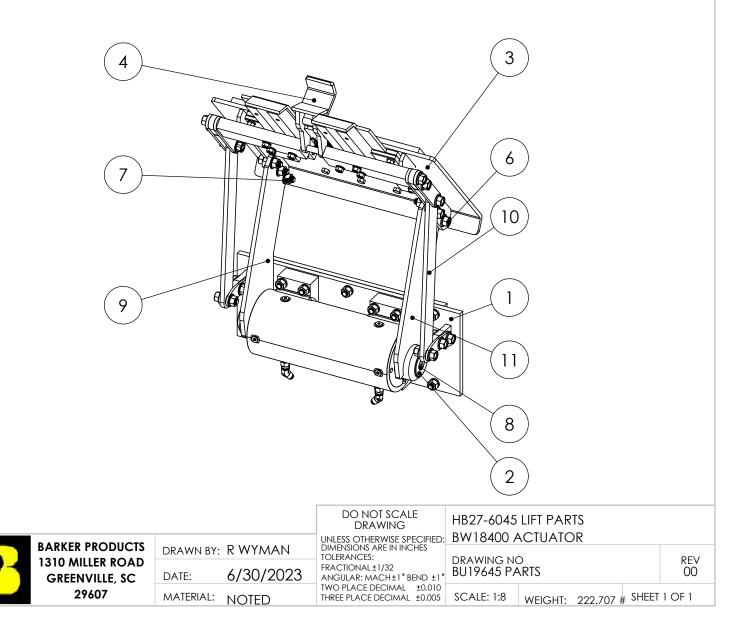


	1	1	1
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	BW19014	MAINFRAME	1
2	BW17525	MOUNT PLATE - N	1
3	BW07140	PLATE STUD	6
4	BW07105	ACTUATOR MOUNT STUD	8
5	BW18400	ACTUATOR	1
6	XEB081000	1/2 LOCK WASHER	14
7	XDA082000	1/2-20 HEX NUT	14
8	BW18050	SL PIVOT CAP	4
9	XDH081300	1/2-13 FLANGED NUT	6
10	XAE081312	1/2-13 X 1 1/2 FLANGED HHCS	6
11	BW99108	1/2" SPHERICAL BEARING	2
12	BW18002	O-RING GREASE SEAL	2
13	BV00064	6T X 6S ORIFICE FITTING	1
14	BV00025	116 X 1/8 NPT ORIFICE PLUG	1
15	BR04842	6502-06-06 MJ-FJS 45 DEG	2
16	BR03830	6400-06-06 M TUBE TO O-RING	1
	1	I	

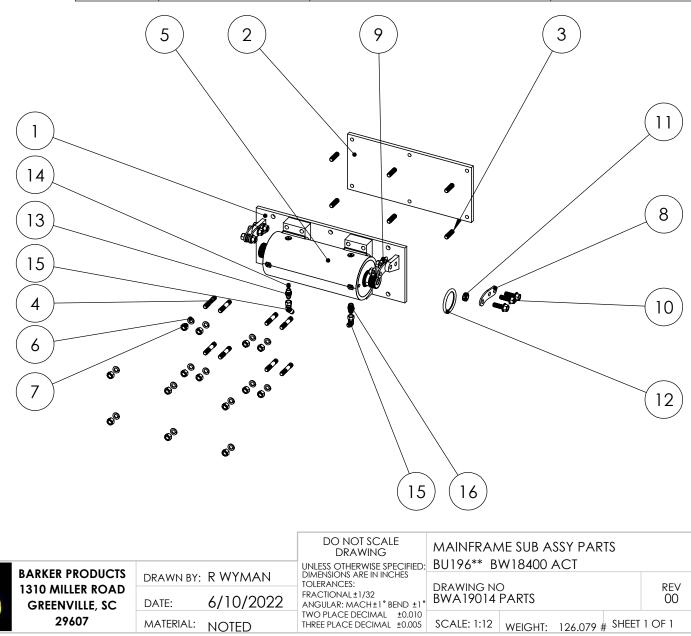

THREE PLACE DECIMAL ±0.005

. PART NUMBER	DESCRIPTION	QTY.
BW10230	SLIDE PLATE	1
XAD061606	3/8-16 X 3/4 FHSCS	12
BW10240	SLIDE SUPPORT	4
BW10100	HOOK SHAFT	1
BW10110	SPRING SHAFT	1
BW02125	5/32 X 3/4 SPRING PIN	2
BW10120	HOOK SPRING	2
BW19285	SLIDE DRIVE	2
BW10680	LOWER HOOK	1
BW19286	SLIDE DRIVE EXTENSION	4
BW19287	EXTENSION SPACER	2
XAE061612	3/8-16 X 1 FLANGED HHCS	6
XAE081312	1/2-13 X 1 1/2 FLANGED HHCS	6
BW99108	1/2" SPHERICAL BEARING	2
XDH081300	1/2-13 FLANGED NUT	2
	BW10230 XAD061606 BW10240 BW10100 BW10110 BW02125 BW10120 BW19285 BW10680 BW19287 XAE061612 XAE081312 BW99108	BW10230 SLIDE PLATE XAD061606 3/8-16 X 3/4 FHSCS BW10240 SLIDE SUPPORT BW10100 HOOK SHAFT BW10110 SPRING SHAFT BW02125 5/32 X 3/4 SPRING PIN BW10120 HOOK SPRING BW19285 SLIDE DRIVE BW10680 LOWER HOOK BW19286 SLIDE DRIVE EXTENSION BW19287 EXTENSION SPACER XAE061612 3/8-16 X 1 FLANGED HHCS XAE081312 1/2-13 X 1 1/2 FLANGED HHCS BW99108 1/2" SPHERICAL BEARING

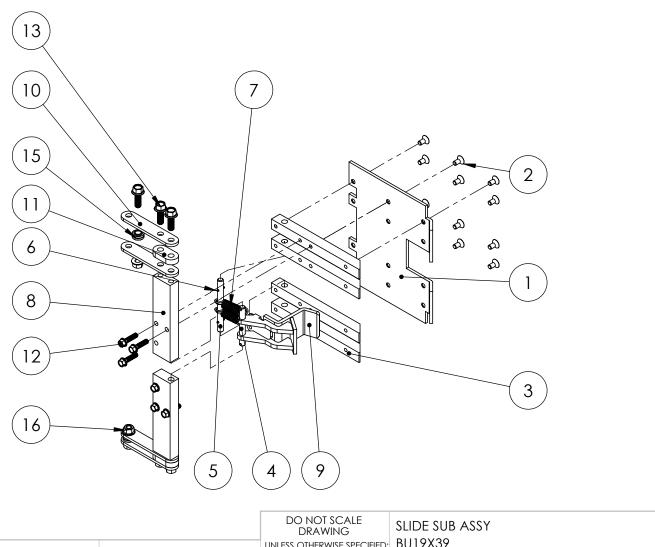

BA	
13	
6	

			DRAWING	ULIDE UUD /				
			UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL±1/32 ANGULAR: MACH±1° BEND ±1°	D: BU19X39				
ARKER PRODUCTS	DRAWN BY:	R WYMAN		DRAWING NO BWA 19280			rev 00	
310 MILLER ROAD GREENVILLE, SC	DATE:	6/14/2022						
29607	MATERIAL:	NOTED	TWO PLACE DECIMAL ±0.010 THREE PLACE DECIMAL ±0.005	SCALE: 1:8	WEIGHT:	33.148 #	SHEET	1 OF 1

—				1
	ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
	1	BW19290	LIFT PLATE	1
	2	BW00800	SADDLE	1
	3	XEA061000	3/8 LOCKWASHER	9
	4	XDA061600	3/8-16 HEX NUT	9
	5	BW10675	CAN SUPPORT	2
	6	XAD061616	3/8-16 X 2 FSHCS	6
	7	BW19110	SLIDE SPACER	2
	8	BW19100	SLIDE CAP	2
	9	XAA061610	3/8-16 X 1 1/4 HHCS	3

